


Ferrule

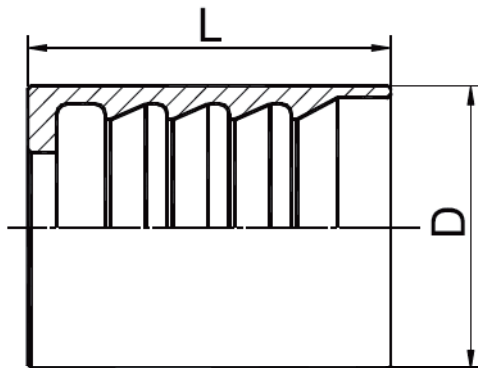


SW00210

FERRULE FOR SAE100R2AT/EN 853 2SN HOSE

PART NO.	HOSE BORE			DIMENSIONS		
	DN	DASH			L	
SW00210-03	5	03			27	
SW00210-04	6	04			30	
SW00210-05	8	05			31	
SW00210-06	10	06			32	
SW00210-08	12	08			34	
SW00210-10	16	10			37	
SW00210-12	20	12			43	
SW00210-16	25	16			50	
SW00210-20	32	20			59	
SW00210-24	40	24			74	
SW00210-32	50	32			78	

NOTE: Not recommended for construction machinery


Ferrule

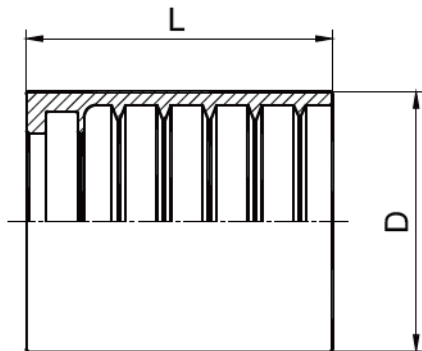

SW00110-A

FERRULE FOR SAE100R1AT/DIN20022 1SN HOSE


PART NO.	HOSE BORE		DIMENSIONS			
	DN	DASH	D	L		
SW00110-03A	5	03	18.5	23		
SW00110-04A	6	04	21	30.5		
SW00110-05A	8	05	21.5	30		
SW00110-06A	10	06	24.3	32		
SW00110-08A	12	08	28	34		
SW00110-10A	16	10	31.3	37		
SW00110-12A	20	12	35.5	42		
SW00110-16A	25	16	43.5	51		

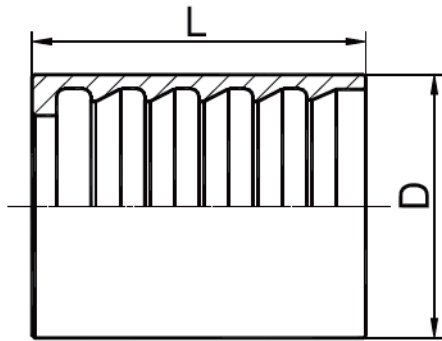

SW00110

FERRULE FOR SAE100R1AT/EN 853 1SN HOSE


PART NO.	HOSE BORE		DIMENSIONS			
	DN	DASH			L	
SW00110-20	32	20			59	
SW00110-24	40	24			74	
SW00110-32	50	32			78	

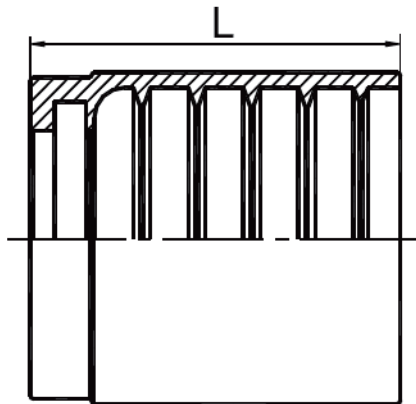

SW03310

FERRULE FOR SAE 100 R2AT/EN 853 2SN HOSE


PART NO.	HOSE BORE		DIMENSIONS			
	DN	DASH		L		
SW03310-03	5	03		23		
SW03310-04	6	04		30.5		
SW03310-05	8	05		30		
SW03310-06	10	06		32		
SW03310-08	12	08		34		
SW03310-10	16	10		37		
SW03310-12	19	12		42		
SW03310-16	25	16		51		

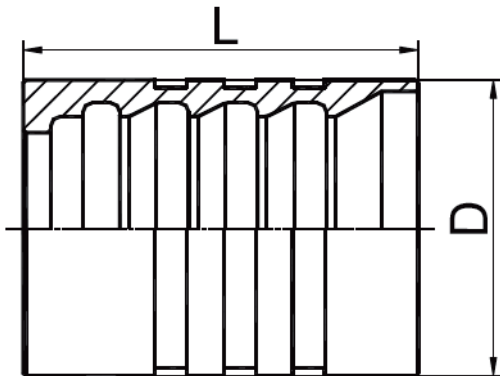

SW00402

FERRULE FOR SAE 100 R9AT-R12,
DIN EN 856-4SP/04-16 HOSE


PART NO.	HOSE BORE		DIMENSIONS			
	DN	DASH	D	L		
SW00402-04	6	04	21.5	30		
SW00402-06	10	06	26	33		
SW00402-08	12	08	30	34		
SW00402-10	16	10	33	39		
SW00402-12	20	12	38	40		
SW00402-16	25	16	46	51		
SW00402-20	32	20	55	60		
SW00402-24	40	24	63	70		
SW00402-32	50	32	77	72		

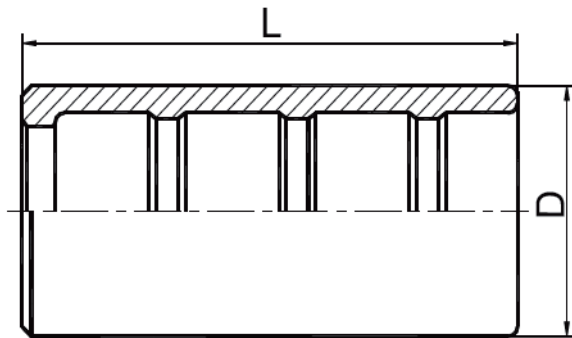

SW00018

FERRULE FOR SAE100R7
HOSE


PART NO.	HOSE BORE		DIMENSIONS			
	DN	DASH	D	L		
SW00018-03	5	03	14.2	27		
SW00018-04	6	04	17	29		
SW00018-05	8	05	18.8	31		
SW00018-06	10	06	21	31		
SW00018-08	12	08	25.5	34		
SW00018-10	16	10	31.5	36		
SW00018-12	20	12	33	43		

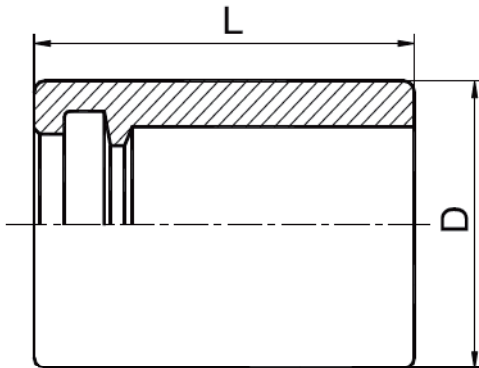

SW00TF0

FERRULE FOR TEFLON HOSE


PART NO.	HOSE BORE			DIMENSIONS		
	DN	DASH			L	
SW00TF0-03	4	03			27.5	
SW00TF0-04	6	04			30.7	
SW00TF0-05	8	05			30.6	
SW00TF0-06	10	06			32.1	
SW00TF0-08	12	08			34.3	
SW00TF0-10	16	10			37	
SW00TF0-12	20	12			42.8	
SW00TF0-14	22	14			42.7	
SW00TF0-16	25	16			50.8	

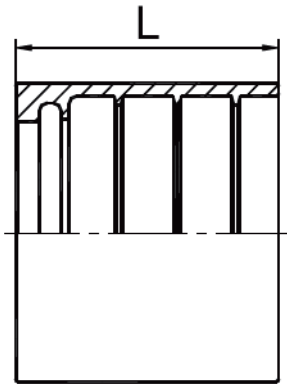

SW00500

FERRULE FOR SAE100R5 HOSE

PART NO.	HOSE BORE				DIMENSIONS	
	DN	DASH	SAE DASH			L
SW00500-03	4	03	04		22.6	
SW00500-04	6	04	05		25.7	
SW00500-05	8	05	06		22.4	
SW00500-07	11	07	08		26.2	
SW00500-08	12	08	10		27.7	
SW00500-10	16	10	12		29.7	
SW00500-14	22	14	16		33.5	
SW00500-18	28	18	20		42.7	
SW00500-22	35	22	24		47.0	
SW00500-29	46	29	32		50.8	
SW00500-38	60	38	40		63.0	

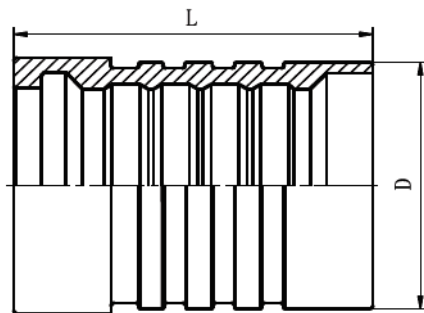

SW00621

INTERLOCK FERRULE FOR
SAE 100R13 HOSE

PART NO.	HOSE BORE		DIMENSIONS			
	DN	DASH	D	L		
SW00621-12	20	12	40	53		
SW00621-16	25	16	49	66		
SW00621-20	32	20	60	88.5		
SW00621-24	40	24	69.5	102		
SW00621-32	50	32	86.5	108		